Installation Advice for Tubular Handrail

Tubular Handrail with Tilt Adjust Plate Bracket - Mod 102

For a straight forward installation you will require a few household tools:

Pencil
Tape Measure
Spirit Level
Drill
Spanner / Wrench
Rawl / Wall Plugs

Handrail Positioning

Recommended height of 1100mm on flat installations and 900mm on stairways.

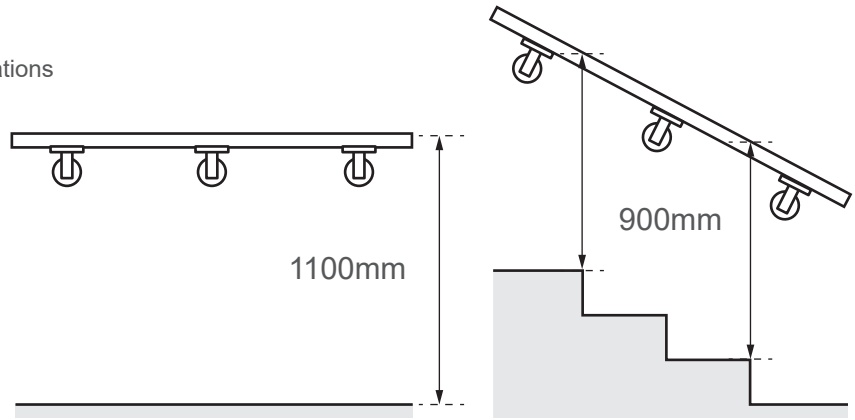

Installation

First we recommend that you mark out the bracket positions in pencil onto the intended fixing surface, using a tape measure and spirit level.

1 Drill pilot holes and insert your rawl/wall plug.
Fix the handrail brackets to the wall with No.10 screws.

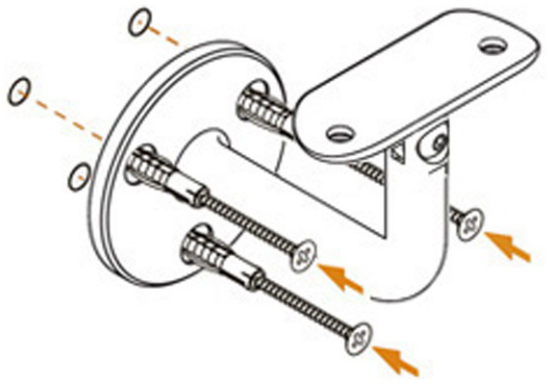

2 Position handrail in place and secure using the screws provided.

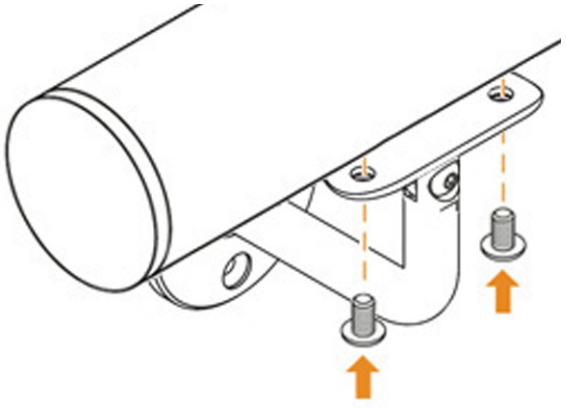

S3i Limited | 1 Faraday Close | Snape Lane | Harworth | DN11 8RU | **E:** info@s3i.co.uk | **T:** 01302 752 504